


Concept Vapeur

**STEAM CLEANER WITH UNLIMITED
AUTONOMY**

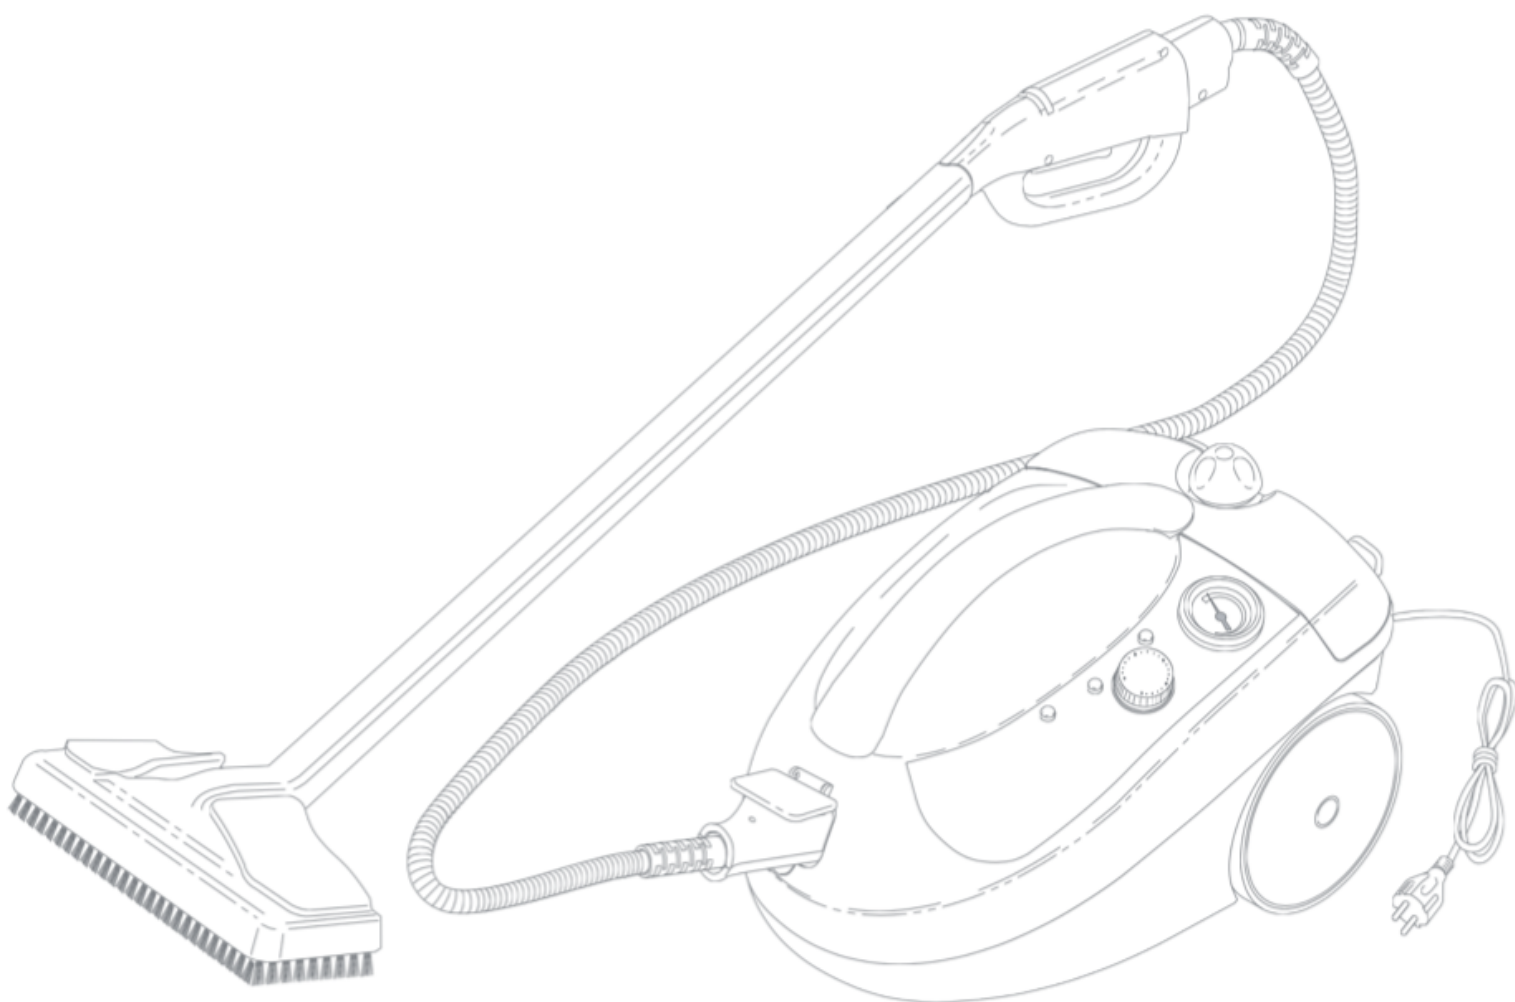

Important safety instructions

- This appliance may be used by children who are at least 8 years old and by persons with reduced physical, sensory or mental capabilities or without experience or knowledge if they are under supervision or if they are instructed in the safe use of the appliance and understand the risks involved. Children should not play with the device.
- Keep the device out of the reach of children when it is turned on or cooling down.
- The appliance must not be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- Liquids or steam should not be directed at equipment containing electrical components, such as the inside of ovens.
- The appliance should not be left unattended when plugged into the mains.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or qualified personnel to

avoid any danger.

- The appliance must be unplugged after use and before the user performs any maintenance on the appliance.
- The appliance is supplied with a boiler that produces steam under pressure : the filling opening must not be opened during use. For this purpose, please read carefully the instructions given in the paragraph (Maintenance) on page 9 of this user's manual.



CAUTION - Risk of burns

- The appliance produces steam which escapes at a very high temperature.
- The unit and its accessories can be hot.
- Avoid direct contact with skin.

GENERAL INSTRUCTIONS

Please read these instructions carefully as they contain important information on safety, operation and maintenance. After removing the device from its packaging, please check that it is in perfect condition. In case of doubt, do not use the device and contact qualified personnel. Do not leave the packaging materials (plastic bag, polystyrene, piton, etc.) within the reach of children as they may be dangerous. Before connecting the device, make sure that the voltage of the device corresponds to the domestic voltage. In case of incompatibility, please ask qualified personnel to change the plug. They should also check that the cross-section of the plug is appropriate for the power consumption of the appliance. In general, the use of multiple and extended plug adapters is not recommended.

If absolutely necessary, use only single or multiple adapters or extension cords that comply with existing safety standards, making sure that the maximum power indicated on the single, multiple or extension cord adapter is within the power limits indicated on the device. This appliance is intended for its own use only. Any other use will be considered improper and therefore dangerous. The manufacturer cannot be held responsible for any damage caused by improper or unreasonable use. The use of electrical appliances requires the observance of some basic rules in particular: 1. do not touch the appliance with wet or damp hands or feet 2. do not use the appliance barefoot 3. do not use, except with care, extension cords in the bathroom or shower 4. do not pull on the power cord or plug the unit into the wall outlet 5. do not leave the unit outdoors (in the rain, sun, etc.) 6. do not allow children or handicapped persons to use the unit without supervision

Before performing any cleaning operation, please turn off the power and unplug the unit. For any repair work, please consult an authorized service center of the distributor and ask for the use of original spare parts. Failure to observe the above rules may compromise the safety of the appliance. If you decide not to use the appliance any more, we recommend that you make it unusable by cutting the power cable after removing the plug from the socket. Never leave the appliance within the reach of children who could use it as a toy.

SPECIAL INSTRUCTIONS

The installation must be done according to the manufacturer's instructions. Incorrect installation may cause damage to persons, animals or objects for which the manufacturer cannot be held responsible. If the appliance is provided with an earth connection, electrical safety is ensured only when the appliance is correctly connected to an earth connection that complies with the safety standards in force. It is necessary to check this safety requirement and in case of doubt have the electrical installation checked by qualified personnel. The manufacturer cannot be held responsible for any damage caused by a faulty earthing system. Make sure that the electrical power of the system and of the sockets is suitable for the maximum power of the appliance indicated on the technical data. In case of doubt, please contact qualified personnel.

To avoid problems of overheating, it is recommended to unroll the entire length of the cord. Do not leave the unit plugged in unnecessarily. Remove the plug from the socket when not in use. Do not block any exhaust or ventilation grills. Keep the unit away from walls and objects. **The cable and plug of this appliance cannot be replaced by the user: You must use the service authorized by the distributor.**

- Do not add any detergent to the tank.
- Remove any dust that may be in the ports.
- Do not insert or drop foreign objects into the ports.
- Make sure the power cord does not come in contact with hot surfaces.
- Do not use the unit if products are aerosolized in the vicinity, or if you are using oxygen.
- To unplug the unit, turn all switches to OFF, then remove the plug.

WARNING!

For your protection, if you want to clean with steam, we recommend that you follow these instructions:

- If it does not come on, or if it stays on constantly, please unplug the product and consult an authorized service center.
- The red warning light should only come on when there is more water in the tank. In the event that the warning light continues to illuminate during normal steam production, and there is still water in the cold water tank, please turn the product off and consult an authorized service center, as this operation appears to be abnormal.
- If during normal operation steam comes out of the boiler's safety valve, please turn off the product and consult an authorized service center.

ATTENTION

Please check the surfaces/carpets carefully before cleaning them, as we will not be liable for the warranty if these surfaces are damaged or cannot be cleaned. Please keep this note!

Dear customer,

You have just acquired this steam cleaner and we congratulate you, because this steam cleaning system has been developed to meet multiple requirements. It offers you a level of performance and a range of applications rarely reached by other devices available on the market. This device is a system and meets the European standards.

- **Deep cleanliness** - Cleaning and disinfection of carpets, cushions, mattresses, tiles, radiators, ovens, windows, car rims etc. through steam pressure.


- **Environmentally friendly** - The power of its hot, dry steam cleans and degreases smooth surfaces, cracks, grooves and other hard-to-reach areas without chemicals.
- **Hygienic** - Eliminates germs, bacteria, mites and other vermin.
- **Safe** - Stainless steel boiler and special jacketed hose.
- **New - Safety** transformer with a voltage of 12 volts only for the steam button on the gun handle.

As you will quickly see, your steam cleaner is easy and safe to use. We recommend that you read the operating instructions carefully while trying out the various functions presented, in order to familiarize yourself with the many possibilities of your steam cleaner.


The manufacturer reserves the right to change the equipment, design or accessories of this appliance without prior notice in the light of technical developments.

DESCRIPTION OF THE STEAM CLEANER

- 1 - Main switch ON/OFF
- 2 - ON/OFF indicator light
- 3 - Steam indicator light
- 4 - Water level indicator light
- 5 - Power cable
- 6 - Tank cap
- 7 - Transport handle
- 8 - Pressure gauge
- 9 - Wheels

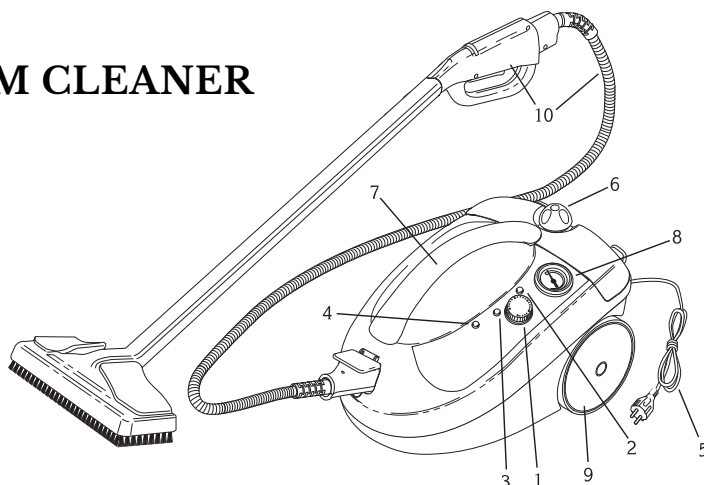

- 10 - Hose with gun and steam button
- 11 - Extensions tubes
- 12 - Large brush
- 13 - Small round brush in Pekalon
- 14 - Filling bottle
- 15 - Fitting
- 16 - High pressure nozzle
- 17 - Small round nylon brush

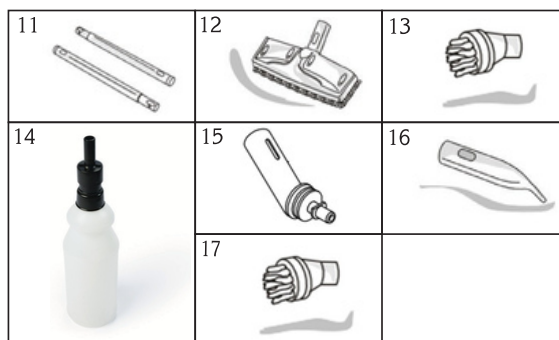

PUTTING THE STEAM CLEANER INTO OPERATION

- Fill the tank (6) with demineralized water according to the capacity indicated in the table.
- Connect the power cable to the mains.
- Connect the hose to the unit (10) and then connect the accessory to be used.
- Turn on the main switch (1) and set it to the "boiler" symbol. The pilot light (2) lights up: the appliance is heating up. When the steam lamp (3) lights up, the appliance is ready for use.
- If you hear a low humming sound coming from the appliance, it means

the pump transfers the water from the tank to the boiler to obtain the steam needed for cleaning. When you use the appliance for the first time, we recommend you to let out steam, by pressing the steam button (10)

This model is provided with the following functions:

- Red low water indicator (4)

A red light (4) will light up and go out alternately with an acoustic signal, indicating that there is no more water in the tank. This is followed by a continuous humming of the pump. We recommend that you do not clean when there is no water in the tank, as this may damage the steam function of the product. At this point, please read the chapter "Commissioning the Steam Cleaner".

- Pressure gauge (8)

The pressure gauge helps you to keep the boiler pressure under control.

USE OF THE ACCESSORIES

Connecting the accessories.

Connect the pistol grip (10) to the extension tubes (11) by pressing lightly on the locking button until the button clicks into place. All accessories are connected in the same way.

To connect the connection plug of the hose (10) to the socket of the device, push until the raised part of the cover fits into the corresponding hole of the socket.

The connection (15) is used for the rectangular brush (12) according to the following instructions:

- hold the brush with one hand with the bristles facing downwards and with the other hand insert the connector, pointing it towards the insert the connector, pointing downwards into the brush
- once the connector is inserted, turn it upwards by 180°.

To remove it, proceed in the opposite way.

- **LARGE BRUSH**

Hard floor cleaning

Connect the gun handle to the extension tubes and then the extension tube to the large brush, apply cloths to the brush to collect the dirt. Brush the floor in regular movements.

Insist on the joints and unevenness to remove the deeper dirt and the floors will regain their shine.

On Linoleum, work carefully with little steam to leave its natural splendor unaltered.

Carpet cleaning with brush and cloth.

This device can clean and disinfect all carpets and rugs. It even removes pet hair and moths without chemicals. It revives colors and restores plumpness.

To begin, dust the carpet with a vacuum cleaner. Cover the brush

with a cloth, this way, the brush will glide over the floor without damaging the weave of the carpet. In addition, thanks to the swirling of the steam and the pressure difference generated, the dirt is sucked directly into the cloth.

If necessary, repeat the operation more times. When ironing, use a dry cloth on the brush.

Stretched fabrics, mattresses, box springs etc. can be cleaned and disinfected in the same way.

Depending on the quality of the carpets, they normally need little steam.

Cleaning of sealed parquet and marble floors

Use the large brush with a dry cloth folded in two layers and brush regularly.

Treatment of walls, ceilings and high windows

Connect the necessary lengths of tubing to the large brush; cover with a dry cloth.

IMPORTANT: Change the cloth when it is dirty. Be careful with water soluble colors!

• GUN WITH HIGH PRESSURE NOZZLE

The high pressure nozzle can be connected with or without the small round brush.

Press the steam button and direct the first steam jet onto a cloth to remove any condensation and dirt.

The use of the gun is particularly recommended for cleaning and degreasing:

Kitchen tile joints, worktops, extractor hoods, interior, exterior and oven glass, ventilation grills, wooden or laminate kitchen furniture, stainless steel sinks, sinks, bathtubs, bidets, toilets, showers, fittings, doors, windows and stairs, metal frames, car rims and others.

For a first treatment, it is recommended to use the small round brush (17) or (13). Depending on the surface to be treated, it can be covered with a dry cloth.

dry cloth.

FILLING THE TANK

Your product can be filled during use and at any time because it has a cold water tank that automatically feeds the boiler under pressure.

MAINTENANCE

You must use demineralized water or water produced by the Osmosis Kit to maintain the performance of your steam cleaner. We recommend that you drain the boiler at least once a year to remove any residue. After emptying the boiler, the red indicator lamp (4) may light up. This is quite normal as it indicates that the water is being loaded into the boiler. After waiting a few minutes and once the red indicator light (4) has gone out, your product will resume normal operation, as the boiler will have reached its optimal water level.

FITTINGS

If the socket becomes too hard after a very long use, grease lightly the circumference of the of the steam socket of the generator. Proceed with the same operation for the other accessories.

TECHNICAL DATA

Power supply	230V ~ 50 Hz
Maximum power	2200W
Useful capacity	2l
Steam pressure	450kPa (4,5bar)



The symbol  on the product or its packaging indicates that this product cannot be treated as household waste. It must be returned to the collection point provided for this purpose (collection and recycling of electrical and electronic equipment). By disposing of the product in accordance with the regulations, we are protecting the environment and our safety, and ensuring that the waste is treated in an appropriate manner. For more information on the recycling of this product, please contact your local authority or the store where you made the purchase.



40, rue Nicéphore Niepce
42100 St Etienne France
www.concept-vapeur.com

7CLIIIC910

